

# ECO-CEM®

## Care & Maintenance

The life and appearance of the ECO-CEM® panel installations can be prolonged by following the simple procedures listed below.

### **Dirt and Grit**

The surface of ECO-CEM® is smooth thus dirt and dust do not stick. However, grit and sand can act like sandpaper on the finish causing scratches, dents and dulling. Therefore, we recommend the placement of floor mats at entrances to trap debris and prevent scuffing, and to sweep or vacuum regularly.

### **Spills**

Clean-up spills as they happen, rinse with water or, if needed, a normal household cleaning agent.

### **Damp Mop**

Damp mopping is the fastest and most thorough way to deep-clean ECO-CEM® flooring. With medium to heavy traffic you may want to damp mop as often as once a week. Avoid oil soaps as they may stain the surface.

Use a mixture of neutral PH non-oily cleaner with water. Mop generously with this mixture, rinse the mop in clean water, wring the mop dry, and then mop once again for a final rinse. Specialty products like Fila Cleaner or something similar are best to be used with ECO-CEM®.

### **Stain Removal / Surface Repair**

ECO-CEM® is a natural material that due to its high content of cellulose fibers will develop a patina and may stain. Spills should be cleaned up immediately to avoid staining of the surface.

ECO-CEM® may be sanded down if the need occurs. Due to the components of the material a natural uneven coloration may become emphasized – not unlike poured concrete.

### **Disclaimer**

Proper preparation and installation is the responsibility of the user. These recommendations are supplied as a technical service and may be subject to change.

For detailed questions as well as purchasing of the products please contact the manufacturer directly.